


SPORTSMAN®

鬓发修剪 眉毛修剪
胡须修剪 鼻毛修剪

4in1
SM-409



请仔细阅读4合1家庭修剪套装的使用说明. 我们致力于为您带来精心设计的产物, 让您的生活充满爱的乐趣和方便. 从购买之日起, 在正常使用下, 若发生任何因制造工艺或材质造成损坏, 1年内为用户提供免费维修服务.

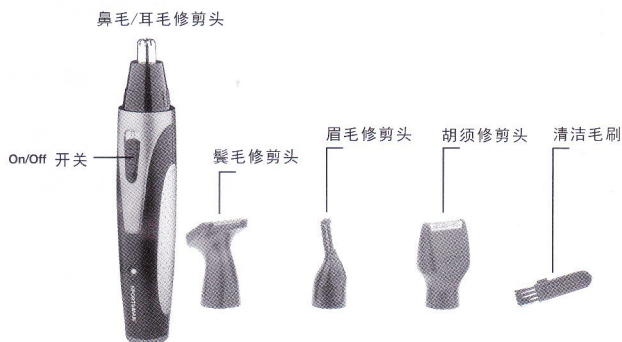

使用方法

充电说明

1. 充电时间8小时.
2. 额定电压AC220V 50Hz.
3. 充电时确定开关推键处于“关”的状态, 将充电插头插入电源插座, 指示灯这即可.

头部更换说明

握住修剪机主体并开关一面朝向您, 在修剪机主体的顶部定位更换修剪头, 往下套顺时针旋转到位即可装上头部.

使用修剪头

取下保护罩, 将开关处于“ON”位置, 小心将鼻毛头放入你的鼻孔内修剪鼻毛. 使用相同的过程修剪耳毛, 鬓毛, 眉毛和胡须.

(A) 修剪头鼻毛/耳毛修剪头

1. 此鼻毛修剪器能去除鼻子或耳朵区域内多余的毛发。
2. 轻轻地接近区域进行修整, 鼻毛器切勿用力进入鼻子或耳腔, 因为这样可能导致伤害。
3. 如果您在使用时遇到任何疼痛或不适, 请立即停止使用。
4. 使用后经常清理鼻毛器, 并罩上保护罩。

(B) 鬓毛修剪头

您可以用此修剪器修剪眉毛, 修整面部和鬓发, 或任何体毛.

(C) 眉毛修剪头

您可以用此修剪器较小的地方, 修整发际和鬓角. 握住此修剪器按一定的角度轻触你的皮肤可做剃须刀使用, 但可能会导致皮肤有点不适.

(C) 胡须修剪头

您可以用此修剪器轻触皮肤缓慢剃须.

清洁和保养

定期清洁修剪器, 注意清洁前确保开关处于关闭状态.

清洁刷

保持修剪器主体干燥, 使用附带的刷子清洁各修剪头, 彻底刷干净修剪器顶部残余发屑.

用水清洗

各修剪器的头具有防锈功能, 不锈钢允许您选择用水冲洗. 当连接不可水洗的修剪器主体, 应保持修剪器头部朝下, 只有在修剪头完全干燥的条件下才能使用.

禁止在修剪器主体及附件头上使用刺激性或腐蚀性的清洁剂.


禁止对修剪器主体及附件头施加压力或硬物撞击.

请保持器具干燥

SPORTSMAN®

Nose Trimmer
Eyebrow Trimmer
Sideburn Trimmer
Beard Trimmer

4in1
SM-409

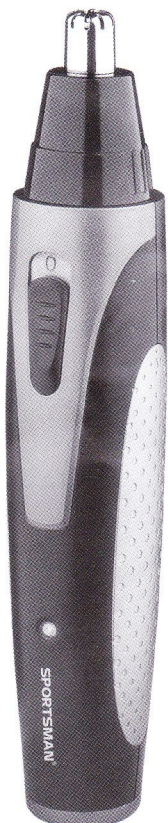

CAUTION

Use this appliance only for its intended use as described in this manual.
Do not use this product if it is not working correctly, if it has been damaged, or
drapped into water.



Sideburn Trimmer



Nose Trimmer



Beard Trimmer



Eyebrow Trimmer



Protective cap



Cleaning brush



Charging power
supply

GETTING STARTED

CHARGING YOUR PERSONAL GROOMER

Ensure the product is switched off.

Connect the charging adaptor to the product and then to the mains. The
charging indicator will light up.

CORDED USE

Connect the charging adaptor to the product and then to the mains.

CAUTION: Extended mains only use will result in the reduction of the battery life.

HOW TO USE

BEFORE YOU BEGIN

Always comb your beard and hair a fine comb before you start trimming.

1

ATTACHING AND REMOVING THE HEAD

To attach or remove the head press the release button of the product.

CARE FOR YOUR HAIR AND BEARD TRIMMER

CLEANING AND MAINTAINING YOUR HAIR AND BEARD TRIMMER AFTER EACH USE

1. Turn the trimmer off.
2. Gently brush the remaining hairs away/rinse from the guide comb and
trimmer blade.

CLEANING CAUTIONS

Only use the light-grade oil supplied or sewing machine oil on the blades.
Do not use harsh or corrosive cleaners on the units or their blades.
Do not submerging in water as damage will occur.
Do not wash the whole product as damage will occur.

STORAGE

Always store this appliance and cord in a moisture-free area. Do not store it in
temperature exceeding 140°F (60°C).
Do not wrap the cord of the charging adaptor around the appliance.

CLEANING

Ensure the shaver is switched off and unplugged from the mains outlet.
Press the button and release the head assembly from the shaver body.
(DIAGRAM A)
Gently tap the shaver head on a flat surface to remove the hair particles, and
clean with the cleaning brush supplied. (DIAGRAM B)
Make sure the trimmer head dry and turn on the unit for use. (DIAGRAM D)
Never use the cleaning brush on the foils as damage may occur.
Close the shaving unit.
At regular intervals, put a drop of lubricant onto the shaving frame/head.

IMPORTANT SAFETY INSTRUCTIONS

WARNING-TO REDUCE THE RISK OF BURNS, ELECTROCUTION, FIRE, OR INJURY TO PERSONS:

An appliance should never be left unattended when plugged into a power outlet.

WARNING: Detach the hand held part from the supply cord before cleaning it
in water.

WARNING: The parts that have to be fixed must be installed so they cannot
fall into water.

Keep the power plug and cord away from heated surfaces.

Make sure the power plug and cord do not get wet.

Does not use the product with a damaged cord.

Charge, use and store the product at a temperature between 15°C and 35°C.

Always unplug from the mains when cleaning.

Only use the parts supplied with the appliance.

Keep this product out of reach of children. The use of this appliance by
persons with reduced physical, sensory or mental capabilities or lack of
experience and knowledge can give cause to hazards. persons responsible for
their safety should give explicit instructions or supervise the use of the appliance.

Specification

Input: AC 110-240V 50/60Hz 3W

Output: 3.0VDC 600mA

Before use, please make sure to use and after five positions to force oil.